



# 2007-11 Chevy Silverado

## "1500" Mesh Grille Bolt Over

PART# 3806 Upper



### Hardware

- 4 - Brackets small
- 4 - Brackets Large
- 16 - Nyloc Nuts

1. Start by opening the hood on your vehicle and removing the plastic core support cover. This will make reaching behind the stock grille shell possible. Now place the smaller mesh grille insert into top opening of vehicle and center. Align and push the mounting studs through the stock grille. Place corresponding brackets on mounting studs and secure in place using the supplied 10-24 nyloc nuts. Repeat procedure for the bottom mesh grille. Tighten bolts without over tightening--over tightening could cause the stock grille shell to crack. Note: A drop of red/blue loctite on the stud threads with significantly reduce the chance of nuts backing out due to road vibrations.

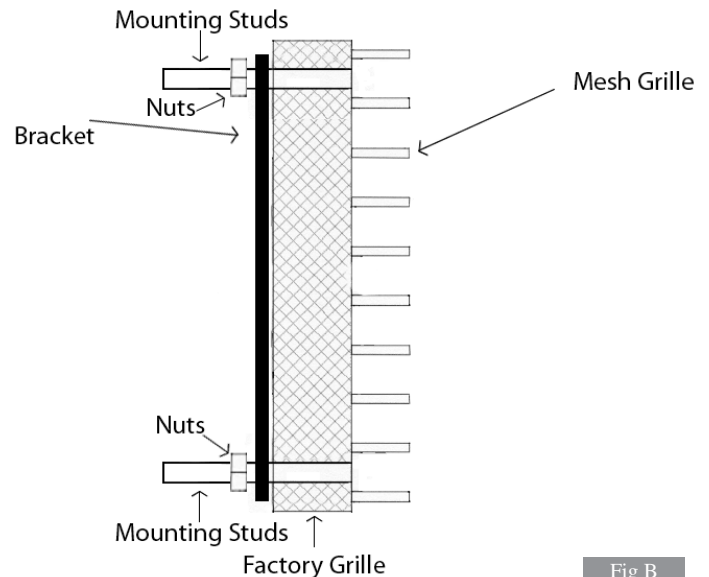


Fig B

Completed Installation

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. Carriage Works is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

NOTE: Please adjust horizontal blades if irregular. This is the result of shipping and handling outside of Carriage Works control. Also Carriage Works Recommends applying a high quality automotive wax to maintain the original appearance.