




40521 / 40522 / 40523

1994-99 GMC CK SERIES PU, SUBURBAN, & YUKON

PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION AND TO CHECK TO SEE THAT ALL PARTS ARE INCLUDED.

Step 1: Center Billet Grille in opening. Use bolts, nuts and brackets supplied and attach per illustration below.

Step 2: Check to make sure the grille is properly in place and tighten the bolts just enough to hold the grille in place.
DO NOT OVER TIGHTEN as this may cause the grille shell to crack.

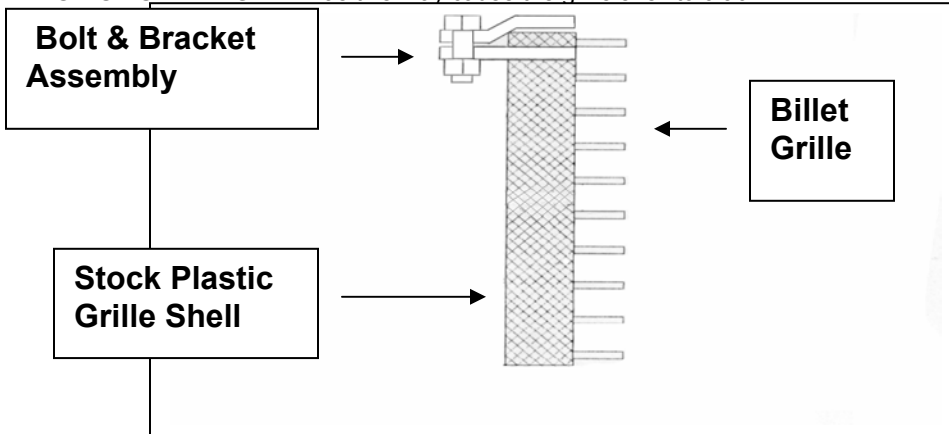

Note: Please adjust horizontal blades if irregular. This is the result of shipping and handling outside of Carriage Works control. **Carriage Works** recommends applying a high quality automotive wax to maintain the original appearance.

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. Carriage Works is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.